

# Translations:Bélier hydraulique/134/en

---

At the beginning the pump is empty from water and all valves are closed. Open a little the delivery tap (leading to the tank) and then open fully the water inlet valve (coming from the drive pipe). Water will then push the primary valve and activate the system.