

# Translations:Bélier hydraulique/135/en

---

You will have to drain regularly the pump. Indeed, there must always be air under pressure in the chamber (pressure is given by the water push). This air will empty progressively. To fix this, you will have to close both taps (drive and delivery taps), open the drain tap and reactivate the system as shown before.