

# Translations:Bélier hydraulique/47/en

---

If doesn't work properly, you may activate it manually several times in order to have enough conter pressure in the delivery pipe. If the washers are to heavy, or if the valves' trajectory is not adapted, if may still not work properly. This model allows you to make ajustements by moving the first nut and the number of washers. This settings will also impact the quantity of water in the delivery pipe, compared to the waste water.