

Translations:Bélier hydraulique/6/en

To disassemble the extinguisher, you should unscrew the mouthpiece with a wrench and take out the CO2 cartridge it contains.