

Translations:Chauffage solaire version ardoise/97/en

- Prepare a stainless steel tube of the width of the wall where the sensor will be installed. (here, a 100mm diameter tube is used)
- Position the valve at one end of the tube, the opening to the outside
- Mark the positioning of the cylinder assembly, **hot and completely out** , so that the copper fork pushes the fins in maximum opening.
- Rivet the ball portion of the latch to this position.
- Place the tube in the wall, at the air outlet of the sensor, the flap towards the habitat.