

Translations:Dimensionner une installation photovoltaïque autonome/157/en

Basics recall: plugging in serie (+ on - and + on -): we add voltage and we keep same amperage plugging in paralell (+ on + and - on -): we add amperage and we keep same voltage