

# Translations:Dimensionner une installation photovoltaïque autonome/256/en

---

## 1. Maximum percentage discharge

d\_input=input('Enter maximum authorized percentage discharge (20% if you want your battery doesnt get empty to less than 20%. Hit enter if you want to use the default 50% values for lead and 0% otherwise -hypothesis solid state batteries-) try:

```
d=float(d_input)/100
```

except Exception as err:

```
if typebatterie=='plomb':  
    d=0.5  
else:  
    d=0
```