Translations: Douche à recyclage/26/en

With the flexible female/female flexible

- Connect the wall pass-through from the reserve to the inlet of the filtration plant
- Connect the outlet of the filtration station to the pump
- Connect the pump to the accumulator
- Connect the accumulator to the inlet of the instantaneous water heater
- Connect the instantaneous water heater output to one of the 3-way valve inputs
- After turning off the water upstream, unscrew the hot water inlet of the mixer tap.
- Connect the second inlet of the 3-way valve to the inlet of the hot water from the network.
- Connect the outlet of the 3-way valve to the hot inlet of the mixer tap
- Check the tightness by pressurizing
- Make the electrical connection to the water heater and pump, taking care to comply with the installation rules (fuse, out of water, etc.)

Optional:

• If the choice is made to install a UV lamp, install it after the tank

"Remarks

- 1. The entire recycling circuit can be, for example, fixed to a wall adjacent to the shower or hidden in a cupboard at the bottom of the shower.
- 2. The use of electricity (pump and water heater) requires careful assembly according to the assembly rules of each system to avoid any incident
- 3. Be careful to locate the 2 inputs (which have a "closed" position) of the 3-way valve and the output, which always remains open
- 4. If the instantaneous water heater allows it, set the hot outlet to the temperature that you think is ideal for a shower.
- $5. \ \ Be\ careful\ with\ the\ positioning\ of\ the\ filter\ holders:\ you\ must\ leave\ 10\ to\ 15\ centimeters\ under\ them\ in\ order\ to\ be\ able\ to\ unscrew\ them.$