

Translations:Eolienne 200W/279/en

- Adjust the gap between the rotor and the stator by adjusting the nuts of the stator. The gap should be about 1mm.