

# Translations:Filtre à eau céramique/67/en

---

- Operation and maintenance: the user pours water into the filter. The water moves slowly through the ceramic pot by gravity; it is then collected in a hygienic storage tank. Users have access to the treated water via a tap.
- Maintenance: the lower tank, tap and cover should be cleaned regularly. The ceramic pot should be cleaned every 6 months with a cloth or soft brush, taking care not to touch the bottom of the pot with anything that may be contaminated.
- Replacement: Ceramic pots should be replaced every 2-3 years, or sooner if visible cracks appear.