

Translations: Remorque génératrice solaire - Système électrique/71/en

- Isolating and breaking devices ("circuit breaker and/or switch - disconnecter") must be installed in different places to install and maintain the system safely :
 - Between the SP and the charge controller
 - Between the charge controller and batteries
 - Between the batteries and the inverter
 - Between the batteries and the DC loads