

# Translations:Chauffage solaire version ardoise/93/en

---

**Note:** The thermostatic cylinder works without electricity. It contains a calibrated material that expands from 25 ° C and retracts below.

- Limer the internal pointing of 12mm and 14mm copper sleeves
- Split the length of the 14mm sleeve.
- Insert the cylinder into the 12 mm sleeve and all into the 14 mm sleeve.
- Insert this assembly into the brass nipple 15/21.
- Close the bottom side of the cylinder by aiming a blind nut on the nipple.
- Screw the open nut onto the other side of the nipple.