

Translations:Pompe manuelle (verticale)/10/en-gb

Pressure is created when the piston is lowered which then closes the non-return valve at the bottom and opens up the other valve. This allows the water is to flow out.